Schlebach Quadro

RAKE WALL TRANSITION

1.) Turn cut edge of panel up 1".

2.) Determine location off zee closure. Apply sealant tape to flat of panel.

3.) Place closure on top of sealant tape. Secure through tape, panel, and cleat 1/4–14 x 7/8" HWH Tek/1 fasteners @ 12"oc.

4.) Apply a continuous strip of sealant tape to the top of the zee closure. Seal between ends of tape with butyl sealant.

5.) Install the transition trim. Secure to closure zee with 1/4–14 x 7/8" HWH Tek/1 fasteners at 12"oc.
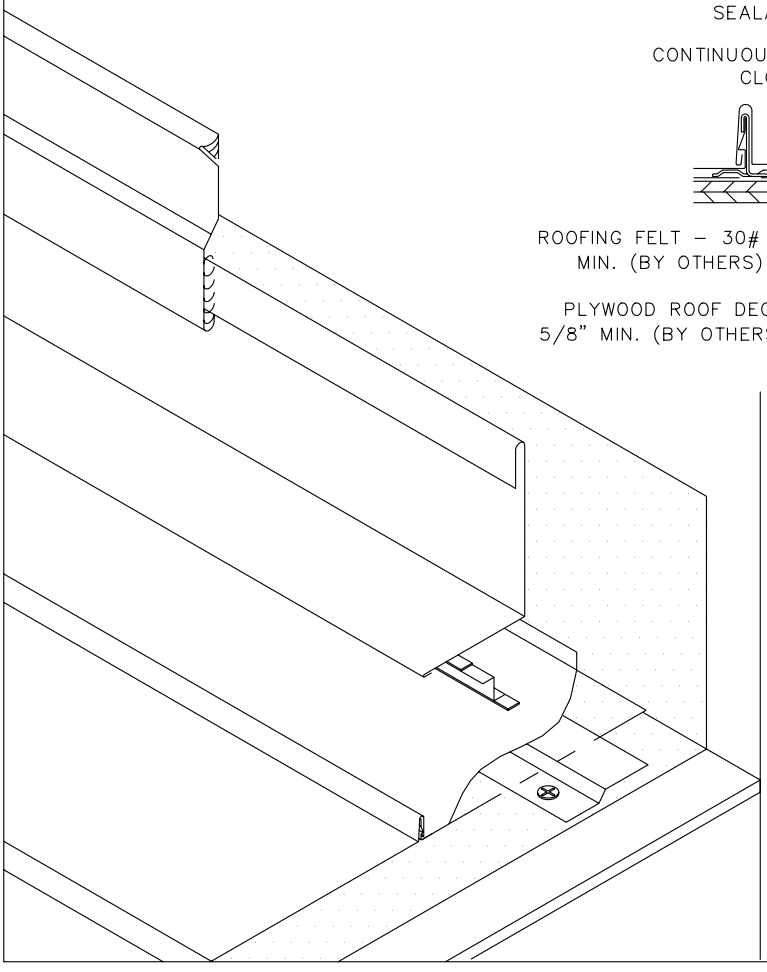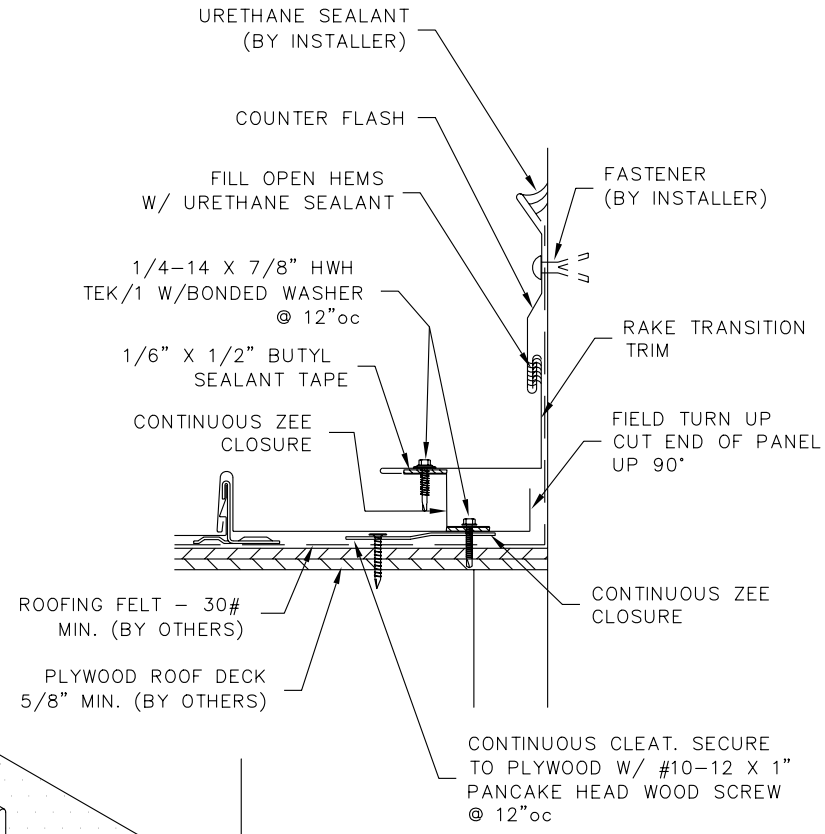
6.) Fill open hem of counter flash with urethane sealant. Interlock the two trims and secure counter flash to wall with the appropriate fastener.