Schlebach Quadro

RIDGE / HIP

1.) Determine location of zee closure. Apply sealant tape to flat of panel.

2.) Place closure on top of sealant tape. Secure through tape and panel with #9–16 x 1" HWH wood screws @ 4"oc. Seal the tab of the closure to the side joints with butyl sealant.

3.) Apply a continuous strip of sealant tape to the top of the zee closure. Seal between ends of tape with butyl sealant.
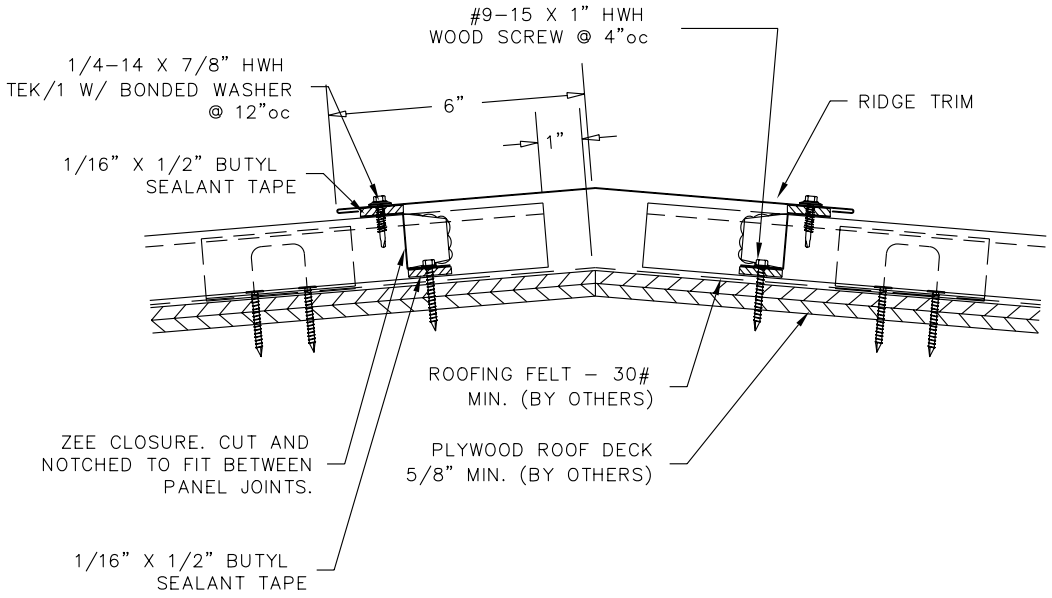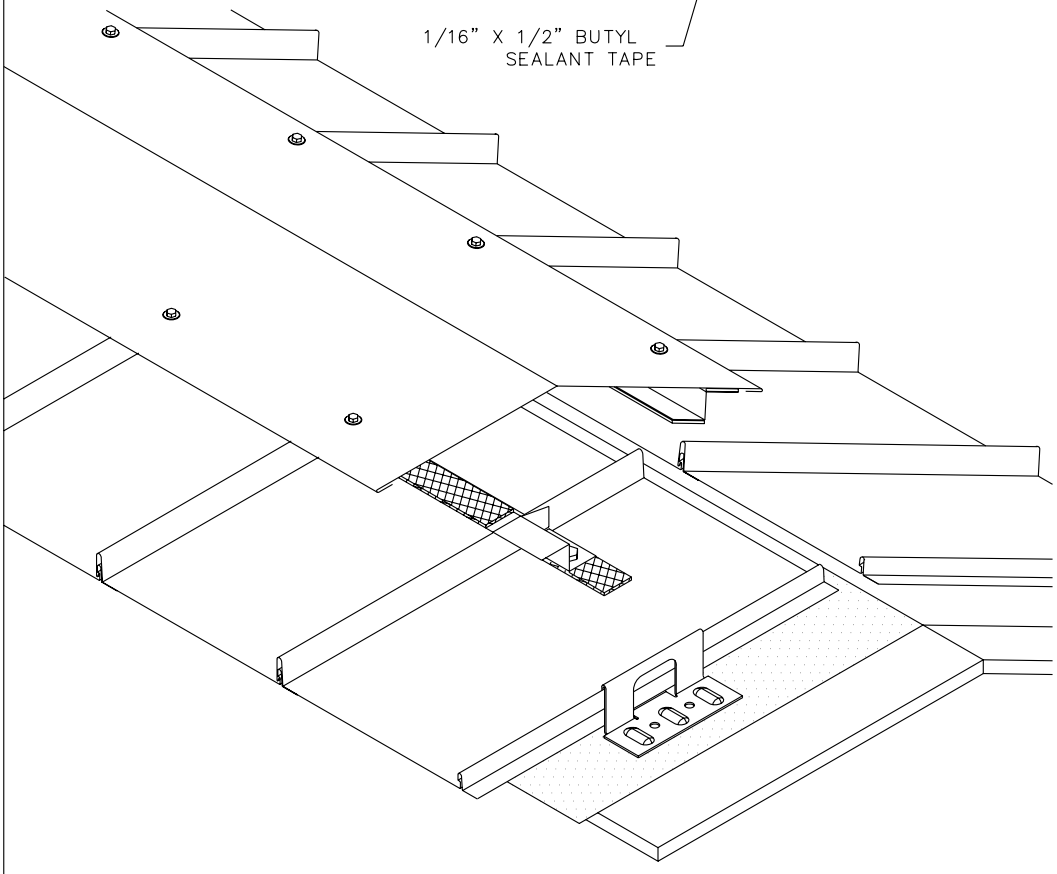
4.) Install the ridge trim. Secure to closure zee with 1/4–14 x 7/8" HWH Tek/1 fasteners at 12"oc.